

ALCATEL

Versatis P120 / Versatis P120 Duo / Trio
Versatis P170 / Versatis P170 Duo / Trio



USER MANUAL



ATLINKS Europe, 22 quai Gallieni 92150 Suresnes – France
Alcatel Logo and Alcatel name are trademarks of Alcatel and used under license by Atlinks.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1) Read and understand all the instructions.
- 2) Follow all warnings and instructions marked on the product.
- 3) Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4) Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
- 5) Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 6) Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- 7) Do not use the telephone to report a gas leak in the vicinity of the leak.
- 8) Use only the supplied NiMH batteries!
- 9) The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
- 10) Do not use third party charging bays. The batteries may be damaged.
- 11) Please note the correct polarity while inserting the batteries.
- 12) Do not immerse batteries in water, do not place in fire.


Package contents
The package contains the following items:

- 1 Handset (2 handsets for a twin system, 3 handsets for a triple system)
- 1 Base station
- Charger pods for multi-handset system
- 1 AC power adapter for base station
- Power adaptor for charger pods
- 1 Telephone line cord
- 2 rechargeable batteries for each handset
- User manuals

2. INSTALLING YOUR PHONE

2.1. Connecting the base station

- 1) Plug the power supply — and line cord — into the base station (as described on the drawing).
- 2) Plug the power supply & line cord into the wall socket.
- 3) Always use the cables provided in the box.

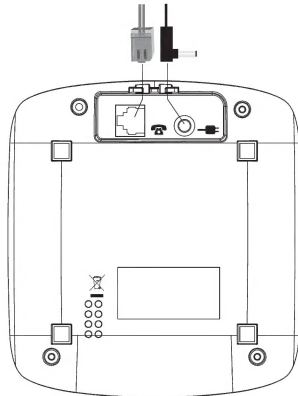


2.2. Connecting the charger (in case of multi-system)

1. Plug the power supply into the wall socket
2. Always use the cables provided in the box

2.3. Installing and charging the batteries

- 1) Slide open the battery compartment cover.
- 2) Place the 2 batteries as indicated. Respect polarity.
- 3) Slide the battery compartment cover back.
- 4) Put the handset on the base and charge for 14 hours first time. A beep indicates that the handset is properly placed on the base or charger.


Use only the power pack provided for the base station.
Use only NiMH rechargeable batteries with the same characteristics as the ones supplied with the product.

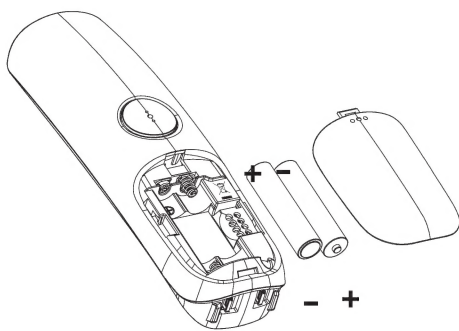

3. GETTING TO KNOW YOUR PHONE

3.1. Overview of VERSATIS P170


- 1. LEFT SOFT KEY (MENU/OK)**
In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/ Phonebook/ Redial List/ Call List
- 2. RIGHT SOFT KEY (CLEAR/BACK/MUTE/INTERCOM)**
In main menu mode: Press to go back to idle screen
In sub-menu mode: Press to go back to previous level
In sub-menu mode: Press and hold to go back to idle screen
In editing / predialing mode: Press to clear a character / digit
In editing / predialing mode: Press and hold to delete all the characters / digits
During a call: Press to mute / unmute the microphone
In idle mode: Press to intercom another handset
- 3. UP**
In idle mode: Press to access the call list
In menu mode: Press to scroll up the menu items
In Phonebook list / Redial list / Call List: Press to scroll up the list
During a call: Press to increase the volume
In ringing: Press to increase the ringer volume
- 4. DOWN**
In idle mode: Press to access the redial list
In menu mode: Press to scroll down the menu items
In Phonebook list / Redial list / Call List: Press to scroll down the list
During a call: Press to decrease the volume
In ringing: Press to decrease the ringer volume
- 5. TALK ON**
In idle / predialing mode : Press to make a call
In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list
During ringing: Press to answer a call
- 6. TALK OFF**
During a call: Press to end a call and go back to idle screen
In menu / editing mode: Press to go back to previous menu
In menu / editing mode: Press and hold to go back to idle screen
In idle mode: Press and hold to power off the handset
In idle mode (when the handset is powered off): Press and hold to power on the handset
- 7. ALPHANUMERIC KEYPAD, * (STAR), # (HASH)**
Press to insert a digit / character / * / #
* key in idle mode: Press and hold to enable or disable the keypad lock
* key during a call (in Pulse mode): Press to switch to tone mode
key in idle mode: Press and hold to turn on / off the ringer
0 key in idle / predialing / number editing mode: Press and hold to insert a pause
key in Call List mode: Press to review caller's number if applicable
- 8. SPEAKERPHONE**
During a call: Press to turn on / off the speakerphone.
In idle mode / predialing mode / Redial list / Call List / Phonebook entry: Press to make a call with speakerphone
During ringing: Press to answer a call with speakerphone
- 9. PHONEBOOK**
In idle mode: Press to access the phonebook list
- 10. FLASH (R key)**
In idle / predialing mode: Press to insert a flash
During a call: Press to dial a flash
- 11. MICROPHONE**
- 12. EARPIECE**

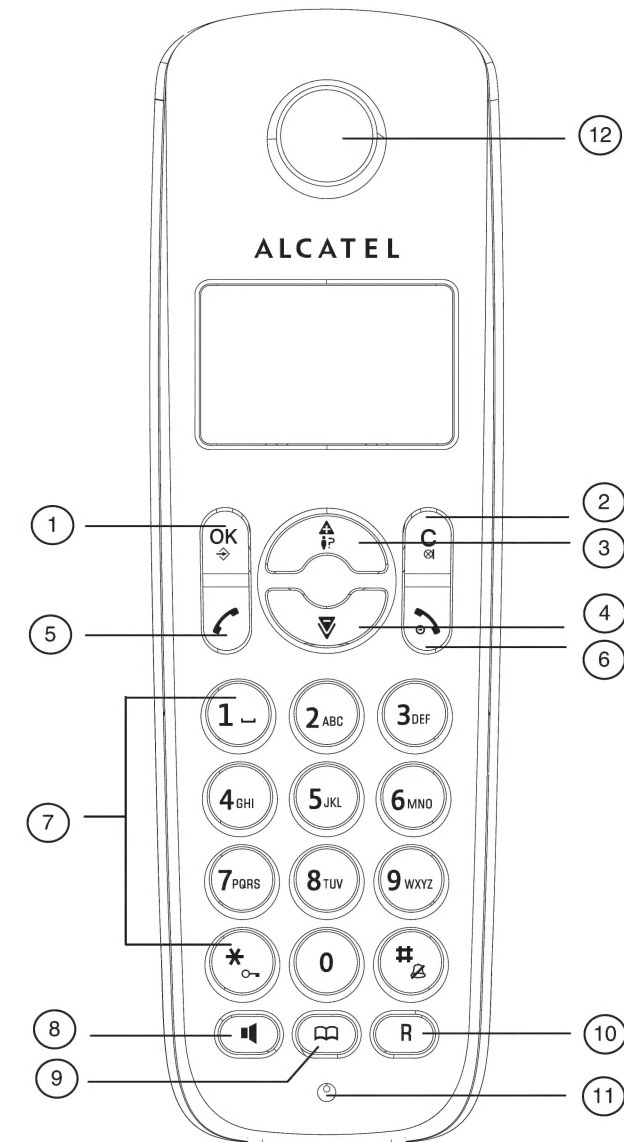

3.2. Overview of VERSATIS P120


- 1. LEFT SOFT KEY (MENU/OK)**
In idle mode: Press to access the main menu
In sub-menu mode: Press to confirm the selection
During a call: Press to access Intercom/ Phonebook/ Redial List/ Call List
- 2. RIGHT SOFT KEY (CLEAR/BACK/MUTE/INTERCOM)**
In main menu mode: Press to go back to idle screen
In sub-menu mode: Press to go back to previous level
In sub-menu mode: Press and hold to go back to idle screen
In editing / predialing mode: Press to clear a character / digit
In editing / predialing mode: Press and hold to delete all the characters / digits
During a call: Press to mute / unmute the microphone
In idle mode: Press to intercom another handset
- 3. UP**
In idle mode: Press to access the call list
In menu mode: Press to scroll up the menu items
In Phonebook list / Redial list / Call List: Press to scroll up the list
During a call: Press to increase the volume
In ringing: Press to increase the ringer volume
- 4. DOWN**
In idle mode: Press to access the redial list
In menu mode: Press to scroll down the menu items
In Phonebook list / Redial list / Call List: Press to scroll down the list
During a call: Press to decrease the volume
In ringing: Press to decrease the ringer volume
- 5. TALK ON**
In idle / predialing mode : Press to make a call
In Redial list / Call List / Phonebook entry: Press to make a call to the selected entry in the list
During ringing: Press to answer a call
- 6. TALK OFF**
During a call: Press to end a call and go back to idle screen
In menu / editing mode: Press to go back to previous menu
In menu / editing mode: Press and hold to go back to idle screen
In idle mode: Press and hold to power off the handset
In idle mode (when the handset is powered off): Press and hold to power on the handset
- 7. ALPHANUMERIC KEYPAD, * (STAR), # (HASH)**
Press to insert a digit / character / * / #
* key in idle mode: Press and hold to enable or disable the keypad lock
* key during a call (in Pulse mode): Press to switch to tone mode
key in idle mode: Press and hold to turn on / off the ringer
0 key in idle / predialing / number editing mode: Press and hold to insert a pause
key in Call List mode: Press to review caller's number if applicable
- 8. REDIAL LIST**
In idle mode: Press to access the redial list

- 9. PHONEBOOK**
In idle mode: Press to access the phonebook list
- 10. FLASH (R key)**
In idle / predialing mode: Press to insert a flash
During a call: Press to dial a flash
- 11. MICROPHONE**
- 12. EARPIECE**

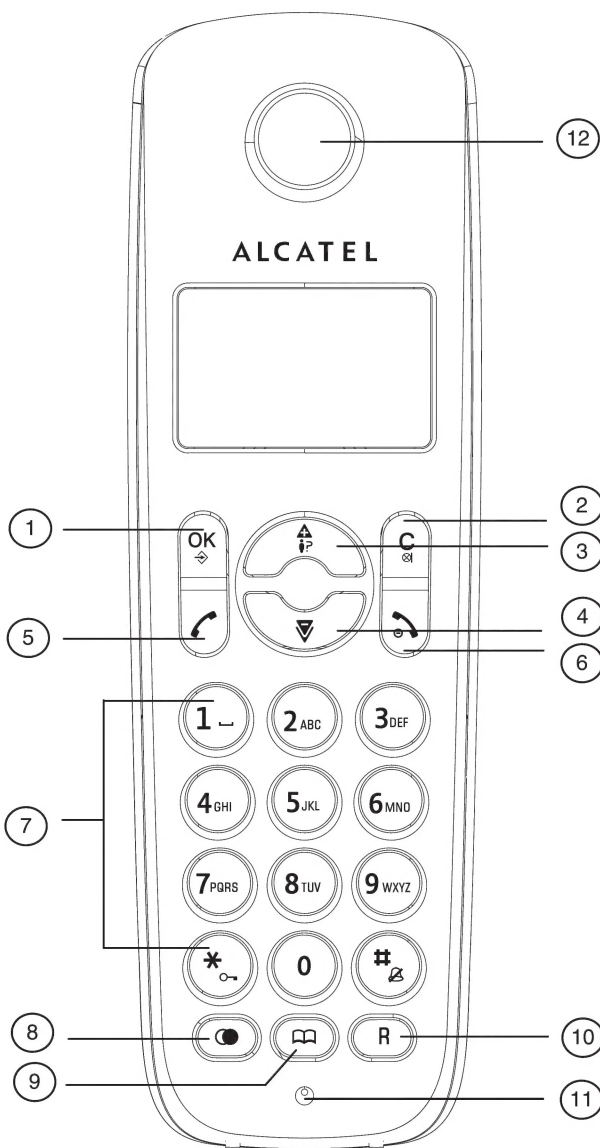


3.3. Base Station Overview

1. If you're looking for your handset, press the Page key on the base station to page your handset. It will ring for approximately 60 seconds. Long press: open registration mode.
- 2. CHARGING CRADLE**

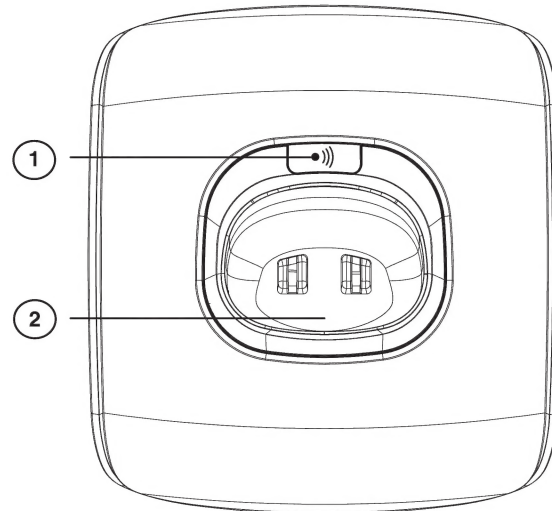

3.4. Display Icons and Symbols

The LCD display gives you information on the current status of the telephone.

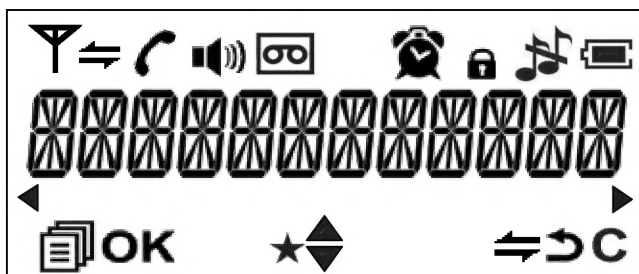

- Scroll up / down the menu items / Phonebook list / Redial list / Call List
- Steady when the handset is in range of the base. Flash when out of range of the base or not registered to the base.
- Steady when an intercom is in progress. Flash when there is an incoming internal call.
- Indicate a call is in progress.
- Indicate that handsfree is being used. (for VERSATIS P170 only)
- Indicate that the ringer is switched off.
- Steady when an alarm is set. Flash when the alarm time set before reaches.
- Indicate that the keypad is locked.
- Indicate you've received voice message(s)
- Indicate when the battery is fully charged. Whole icon flashes when the battery performs initial charging. Internal block icon flashes when the battery is in final charging stage.
- Indicate when the battery needs charging. Flash when low battery power level is detected.
- Indicate when more characters are existed before the text currently displayed.
- Indicate when more characters are existed after the text currently displayed.
- Press to select more menu options if applicable (MENU)
- Press to confirm the current selection if applicable. OK
- Indicate new call in call list. ★
- Press to conduct Intercom call when idle (INT)
- Press to go back to previous menu level or cancel the current action if applicable (BACK)
- Press to clear a character or stop the alarm if applicable, press to mute / unmute during a call. C

3.5. Text editing

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

1. Once a character is selected, the cursor will move to the next position after a short pause.
2. You can move the cursor within the text by <UP/DOWN> to amend the text entry.
3. Press <C> to delete the last character.
4. Press and hold <C> to delete the entire text string.

4. USING YOUR PHONE

4.1. Make a Call

4.1.1. Preparatory Dialing
Enter the phone number and press <TALK ON> or <SPEAKERPHONE> (Versatis P170 only) to dial the number. Press <C> to clear the entry.

4.1.2. Direct Dialing
Press <TALK ON> or <SPEAKERPHONE> (Versatis P170 only) to take the line and enter the phone number.

4.1.3. Call from the phonebook
Press <PHONEBOOK> to access the phonebook and press <UP/DOWN> to select the desired phonebook entry. Press <TALK ON> or <SPEAKERPHONE> (Versatis P170 only) to dial out to the selected phonebook entry. Alternatively, press <MENU/OK> to access the phonebook to get the desired phonebook entry.

4.1.4. Call from the Call List*
Press <UP> to access the Call List and press <UP/DOWN> to select the desired Call List entry. Press <TALK ON> or <SPEAKERPHONE> (Versatis P170 only) to dial out to the selected Call List entry. Alternatively, press <MENU/OK> to access the Call List from the main menu.
* Subject to subscription and technical availability of the service from the fixed line operator.

4.1.5. Call from the redial list
Press <DOWN> to access the redial list and press <UP/DOWN> to select the desired redial number. Press <TALK ON> or <SPEAKERPHONE> (Versatis P170 only) to dial out to the selected redial number.

4.1.6. Call timer
Your handset automatically times the duration of every call. The call timer will display a few seconds after the call has been made.

4.2. Answer a Call

If the handset is not on the charging cradle: When the phone rings, press <TALK ON> / <SPEAKERPHONE> (Versatis P170 only) to answer a call. If the handset is on the charging cradle of the base station and if **AUTO ANSWER** is set to ON: When the phone rings, pick up the handset to answer a call.

4.3. End a Call

Press <TALK OFF> to end the call. OR Put the handset on the base station to end the call.

4.4. Adjust Earpiece and Handsfree Volume (for Versatis P170 only)

During a call: Press <UP/DOWN> to select the desired volume. When you end the call, the setting will remain at the last selected level.

4.5. Mute a Call

You can talk to someone nearby without letting the caller hear you during a call.
During a call: Press <C> to mute the microphone and **"MUTED"** will display on the LCD. Your caller cannot hear you. Press <C> again to unmute the microphone.

4.6. Set the Silent Mode

In idle mode, press and hold <HASH> to turn off the handset ringer. The **"RINGER OFF"** icon is displayed on the LCD.
In silent mode, press and hold <HASH> to turn on the handset ringer. The **"RINGER OFF"** icon will disappear.

4.7. Turn on the Keypad Lock

In idle mode, press and hold <STAR> to turn on the keypad lock. The **"KEYPAD LOCK"** icon is displayed on the LCD.
In keypad lock mode, press and hold <STAR> to turn off the key pad lock. The **"KEYPAD LOCK"** icon will disappear.

4.8. Redial the last number

You can redial up to 5 of the last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

4.8.1.Redial a Number from the Redial List

1. In idle mode, press <DOWN> to access the redial list. Remarks: If redial entry with name, press <HASH> to view the number.
2. Press <UP/DOWN> to browse the redial list.
3. Press <TALK ON> / <SPEAKERPHONE> (only on Versatis P170) to dial to the selected redial number.

Note: If there are no numbers in the redial list, the display shows **"EMPTY"**.

4.8.2.Store a Redial Number into the Phonebook

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press <MENU> and <UP/DOWN> to select **ADD TO PB**.
3. Press <OK> to enter the name.
4. Press <OK> to store the redial number into the phonebook.
5. Press <OK> to select phonebook melody.
6. Press <UP/DOWN> to browse the melody list. The respective melody will be played when browsing the melody list.
7. Press <OK> to confirm.

4.8.3.Delete a Redial Number

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press <MENU> and <UP/DOWN> to select **DELETE**.
3. Press <OK> to confirm.

4.8.4.Delete the Entire Redial List

1. Follow Steps 1 and 2 in section 4.8.1.
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.
3. Press <OK> to confirm.
4. Press <OK> to confirm again.

4.9. Find the Handset

You can locate the handset by pressing <PAGE KEY> on the base station. All the handsets registered to the base will produce the paging tone and **"PAGING"** is displayed on the LCD. You can stop the paging by pressing <TALK ON> / <TALK OFF> / <C> / <SPEAKERPHONE> (for VERSATIS P170 only) on any handset or <PAGE KEY> on the base again.
Note: If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.10. Make an Internal Call

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls; transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.
Note: If only one handset is registered to the base station, press <INT> will display **"NOT POSSIBLE"**

4.10.1. Intercom Another Handset

1. In idle mode, press <C> and the registered handsets will display except the calling handset.
2. Enter the desired handset number to intercom with.
3. The called handset rings and press <TALK ON> on the called handset to establish the internal call.

Note: If two handsets are registered to the base station, press <C> will connect to another handset immediately.

4.10.2. Call All Handsets

1. In idle mode, press <C> and the registered handsets will display.
2. Press <KEY 9> to ring to all registered handsets.

4.10.3. Transfer an External Call to another handset

During an external call:
1. Press <MENU> and select **INTERCOM**.
2. Press <OK> and select the desired handset to intercom with.
3. The external call is put on hold automatically and the called handset rings.
4. Press <TALK ON> on the called handset to establish an internal call.
5. Press <TALK OFF> on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred to the called handset.

Note: If the called handset doesn't answer, press <TALK OFF> on the calling handset to come back to the external call.

4.10.4. Make a 3-way Conference Call
The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.
During an external call:
1. Follow Steps 1 to 4 in section 4.10.3.
2. Press and hold <STAR> on the calling handset to establish the conference call.
Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

5. PRIVATE PHONEBOOK

Your phone can store up to 10 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. Phonebook entries are stored alphabetically by name.

5.1. Add a New Phonebook Entry

In idle:
1. Press <PHONEBOOK> to access the phonebook.
OR Press <MENU> and <UP/DOWN> to select **PHONEBOOK** main menu item and then press <OK> to access the phonebook.
2. Press <MENU> to select **ADD**.
3. Press <OK> to enter the name.
4. Press <OK> to enter the number.
5. Press <OK> and <UP/DOWN> to select the desired ringtone for your phonebook entry.
6. Press <OK> to store the phonebook entry.

5.2. Search a Phonebook Entry

In idle:
1. Press <PHONEBOOK> to access the phonebook.
2. Enter the first character of the name by multi-tap.

5.3. View a Phonebook Entry

In idle:
1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU> and <UP/DOWN> to select **VIEW**.
4. Press <OK> and <UP/DOWN> to review the name, number and melody of the selected phonebook entry.
Note: If number is more than 12 digits, press <LEFT SOFT KEY> or <RIGHT SOFT KEY> to view the remaining digits.

5.4. Edit a Phonebook Entry

In idle:
1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU> and <UP/DOWN> to select **EDIT**.
4. Press <OK> and the current contents of the selected phonebook entry displays.
5. Edit the name and press <OK>.
6. Edit the number and press <OK>.
7. Press <UP/DOWN> to select the ringtone and press <OK> to confirm.

5.5. Delete a Phonebook Entry

In idle:
1. Press <PHONEBOOK> to access the phonebook.
2. Press <UP/DOWN> to select the desired phonebook entry.
3. Press <MENU> and <UP/DOWN> to select **DELETE**.
4. Press <OK> to confirm.

5.6. Delete the Entire Private Phonebook

1. Press <PHONEBOOK> to access the phonebook.
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.
3. Press <OK> to confirm.
4. Press <OK> to re-confirm.

6. CALLER DISPLAY

This feature is available if you have subscribed the Caller Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the Call List. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternatively with the number. The handset will ring with the melody associated with that phonebook entry.

If the caller number is disabled to send caller information, "**WITHHELD**" will display.
If the caller number is not provided, "**OUT OF AREA**" will display.
In standby, if three unanswered calls are received, "**3 NEW CALLS**" will be displayed.

6.1. View the Call List

All received calls are saved in Call List with the latest call putting at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with a <" icon> at the centre of the bottom line of the display.
1. Press <UP> to access the call list.
OR Press <MENU> and <UP/DOWN> to select **CALL LIST**.
2. Press <UP/DOWN> to select the desired entry.
3. Press <#> to view the caller's number if applicable.

6.2. Store a Call List Number into the Phonebook

1. Follow Steps 1 and 2 in Section 6.1
2. Press <MENU> and <UP/DOWN> to select **ADD TO PB**.
3. Press <OK> to enter the name.
4. Press <OK> and the selected call list number is displayed.
5. Edit the number if necessary.
6. Press <OK> and <UP/DOWN> to select the melody.
7. Press <OK> to confirm.

6.3. Delete an entry in the Call List

1. Follow Steps 1 and 2 in Section 6.1
2. Press <MENU> and <UP/DOWN> to select **DELETE**.
3. Press <OK> to confirm.

6.4. Delete the entire list of the Call List

1. Follow Steps 1 and 2 in Section 6.1
2. Press <MENU> and <UP/DOWN> to select **DELETE ALL**.
3. Press <OK> to confirm.
4. Press <OK> to re-confirm.

6.5. View the Details of the Call List Entry

1. Follow Steps 1 and 2 in Section 6.1
2. Press <MENU> and <UP/DOWN> to select **DETAILS**.
3. Press <OK> to display the date and time of the selected call list entry.
4. Press <OK> to go back to previous screen.

7. VOICE MAIL (NETWORK DEPENDENT)

Voice Mail Waiting Indication (VMWI) <**QLO**> is an indication given to you when a new voice mail message is waiting on the network service provider. This feature is available if you have subscribed to the voicemail service from your network service provider.

7.1. Access Voice Mail Messages

<**QLO**> will display and the **VMWI** entry is stored in the **Call List** when you have new message in your voice mailbox.

1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR Press <UP> in idle to access the call list.
3. Press <TALK ON> to dial out to the voice mail server.
Note: If a more recent VMWI entry is received from the same network server number of an existing VMWI entry, the new VMWI will not be stored but the date/time of the VMWI will be updated on the existing VMWI entry. After you have accessed to all new voice mail messages, VMWI will turn off automatically. When the call list is full, the new VMWI entry will replace the oldest non-VMWI entry in the call list.

7.2. Delete VMWI Entries

To delete a single VMWI entry from the call list:
1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR Press <UP> in idle to access the call list.
2. Press <UP/DOWN> to select the desired VMWI entry.
3. Press <MENU> and <UP/DOWN> to select **DELETE**.
4. Press <OK> to confirm.

To delete all VMWI entries from the call list:
To delete a single VMWI entry from the call list:
1. Press <MENU> and <UP/DOWN> to select **CALL LIST**.
OR Press <UP> in idle to access the call list.
2. Press and hold <Key 4> to delete all VMWI entries. The <VMWI icon> will disappear.

Note: If you choose **DELETE ALL** function in the call list, the handset will also delete all VMWI entries and call list entries.

8. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you like it to work.

8.1. Date and Time Settings

Note : If you've subscribe to the Caller Line Identification service, the time and date will be set automatically when you receive a call.
8.1.1. Change the Date Format
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **DATE FORMAT**.
4. Press <UP/DOWN> to select your desired date format (**DD-MM-YY** or **MM-DD-YY**).
5. Press <OK> to confirm.

8.1.2. Change the Time Format
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **TIME FORMAT**.
4. Press <UP/DOWN> to select your desired time format (**12 HR** or **24 HR**).
5. Press <OK> to confirm.

8.1.3. Set the Time
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **SET TIME**.
4. Press <OK> to enter the time information. The time entered will be in the format you set in Section 8.1.2
5. Press <OK> to confirm.
Note: If time has been set before, the current time will display, otherwise, "**HH:MM**" will display.

8.1.4. Set the Date
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DATE & TIME**.
3. Press <OK> and <UP/DOWN> to select **SET DATE**.
4. Press <OK> to enter the date information. The date entered will be in the format you set in Section 8.1.1.
5. Press <OK> to confirm.
Note: If date has been set before, the current date will display, otherwise, "**DD-MM-YY**" will display.

8.2. Alarm Settings

You can use this phone to set an alarm clock. When an alarm is set, the <ALARM icon> displays on the LCD. When the alarm time is reached, the <ALARM icon> and "**ALARM ON**" flash on the LCD ringing with the alarm melody for a duration of 45 seconds. You can press any key to disable the alarm. If snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold <TALK OFF> to terminate the snooze function.

8.2.1. Turn on/off the Alarm
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **ALARM**.
3. Press <OK> and <UP/DOWN> to select **ON/OFF**.
4. Press <OK> to confirm.
Note: If **ON** is selected, you will be asked to set the alarm time.

8.2.2. Set the Alarm Time (if the Alarm is set to be ON)
1. Follow Steps 1 to 4 in Section 8.2.1.
2. Enter the alarm time in the time format you set in Section 8.1.2
3. Press <OK> to set the snooze function.
4. Press <OK> and <UP/DOWN> to select **ON** or **OFF**.
5. Press <OK> to confirm.

8.3. Handset Settings

8.3.1. Set the Ringer Melody for Internal Calls or External Calls
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <OK> and <UP/DOWN> to select **INT RING** or **EXT RING**.
4. Press <OK> and <UP/DOWN> to select the desired ringer melody (a total of 5 melodies for your selection for VERSATIS P120) for setting ringer melody for internal or external calls. (Notes: a total of 10 melodies for VERSATIS P170).
Note: The respective ringer melody will be played while browsing the melody list.
6. Press <OK> to confirm.

8.3.2. Set the Ringer Volume
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RING SETUP**.
3. Press <OK> and <UP/DOWN> to select **RING VOLUME**.
4. Press <OK> and <UP/DOWN> to select the desired ringer volume (a total of 5 ringer volume levels + **VOLUME OFF**).
Note: The respective ringer volume will be played during your selection. If **VOLUME OFF** is selected, <Ringer Off> icon will display.
5. Press <OK> to confirm.

8.3.3. Set Alert Tones
A single beep is emitted when you press a key. You can turn on or off the key tone. You can also turn on the alert tones when low battery and out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up your battery.
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **TONE SETUP**.
3. Press <OK> and <UP/DOWN> to select **KEY TONE / BATTERY TONE / OUT OF RANGE**.
4. Press <OK> and <UP/DOWN> to turn on or off these tones.
5. Press <OK> to confirm.

8.3.4. Set the Handset Language
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **LANGUAGE**.
3. Press <OK> and <UP/DOWN> to select the desired language.
4. Press <OK> to confirm.

8.3.5. Rename the Handset
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **RENAME HS**.
3. Press <OK> and enter the name of your handset.
4. Press <OK> to confirm.

8.3.6. Choose the Information to be displayed in Idle
You can choose to display time or handset name in your idle screen.
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **HS DISPLAY**.
3. Press <OK> and <UP/DOWN> to select **HANDSET NAME** or **TIME**.
4. Press <OK> to confirm.

8.3.7. Set the Auto Answer
If you turn on the Auto Answer, you can pick up the call from the cradle without pressing any key.
1. Press <MENU> and <UP/DOWN> to select **HS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **AUTO ANSWER**.
3. Press <OK> and <UP/DOWN> to turn on or off the auto answer feature.
4. Press <OK> to confirm.

8.4. Base Settings

The current settings are marked by an asterisk which is displayed at the rightmost of the menu item.

8.4.1. De-register a Handset
You are requested to enter the 4-digit PIN (0000 by default) in order to de-register a handset from the base station. The antenna icon on the de-registered handset will blink.
Note: You cannot de-register the handset that you are currently using.
1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DELETE HS**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press <OK> and a list of registered handsets is displayed.
6. Press <UP/DOWN> to select one of the handsets that you want to de-register.
7. Press <OK> to confirm.

8.4.2. Change the dial mode
1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **DIAL MODE**.
3. Press <OK> and <UP/DOWN> to select **tone** or **PULSE**.
4. Press <OK> to confirm.

8.4.3. Change the Flash Time
The flash time settings is country dependent. Please contact your local service provider for the correct settings.
1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **FLASH TIME**.
3. Press <OK> and <UP/DOWN> to select your desired flash time (**SHORT, MEDIUM, LONG**).
4. Press <OK> to confirm.

8.4.4. Change the System PIN Code
A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorized use. The default system PIN code is 0000.
1. Press <MENU> and <UP/DOWN> to select **BS SETTINGS**.
2. Press <OK> and <UP/DOWN> to select **CHANGE PIN**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the old system PIN.
5. Press <OK> and enter the new system PIN.
6. Press <OK> and enter the new system PIN again.
Note: If the new PIN entered in Step 6 is not matched with the new system PIN entered in Step 5, user is requested to enter the valid system PIN again in Step 5.
7. Press <OK> to confirm.

8.5. Registration

Your handset and base station is pre-registered. Up to 5 handsets can be registered to a single base station. If for some reason, the handset is not registered to the base station (<Antenna icon> flashes even when the handset is near the base station), register your handset according to the following procedure.
1. Press and hold <PAGE KEY> on the base station for about five seconds, the base station is entered into registration mode.
2. Press <MENU> and <UP/DOWN> to select **REGISTRATION**.
3. Press <OK> and you are requested to enter the 4-digit system PIN.
4. Enter the 4-digit system PIN.
5. Press <OK> to confirm.
If the handset registration is successful, the <antenna icon> will stop flashing. The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the <antenna icon> will still flash.

8.6. Reset Your Phone

You can reset your phone to the default settings. After reset, all you personal settings and call list entries will be deleted, but your phonebook remains unchanged.
1. Press <MENU> and <UP/DOWN> to select **DEFAULT**.
2. Press <OK> and you are requested to enter the 4-digit system PIN.
3. Enter the 4-digit system PIN.
4. Press <OK> to confirm.
5. Press <OK> to re-confirm.

9. DEFAULT SETTINGS

Outdoor range	up to 300 meters
Indoor range	up to 50 meters
Standby time (hrs) / talk time (hrs)	10hrs talk/100hrs standby
Multi-handset capability	Up to 5 handsets
Intercom between handsets	YES
3-way conference (2 internal & 1 external)	YES
Power adaptor characteristics	Manufacturer : TEN PAO Model S002CV0600030 Input : 100-240 V AC – 100 mA / 50/60 Hz Output : 6 V DC / 300 mA
Battery characteristics	2 x 500 mAh NIMH

10. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Cause	Solutions
No dialing tone when pressing <TALK ON> key	a. The connection cord of the base station is not plugged in. b. The adapter cord is not plugged in correctly in the base station. c. The line is busy, as another handset is used. d. Wrong connection cord	a. Check the connections. Unplug and plug back in the mains. Check that the telephone line cord has been plugged into the base station and the phone socket. b. Check the base station plug and the 220V plug (remove and plug-in). c. Wait until the line is unoccupied. d. Use the original connection cord.
"SEARCHING" is displayed.	a. Base station is out of range. b. Base station not connected to mains.	a. Reduce the range. b. Connect base station to mains.
Impossible to make a call.	Service not activated or wrong operator or wrong setting	Check your Subscription with network or change the dial mode.
No display.	Empty battery	Recharge battery
Your correspondant can't hear you	The microphone is muted	Unmute it (see chapter 4.5)

11. CONFORMITY

This unit conforms to the following rules and regulations: 1995/5/EC Radio frequency and telecommunication equipment and the mutual acceptance of conformity. The CE mark proves the above.



12. ENVIRONMENT

Used equipment must be disposed of in compliance with current environmental protection regulations. You should return it to your reseller or dispose of it in an approved recycling centre. Do not attempt to open the batteries, as they contain chemical substances. In the event of leakage, avoid contact with the skin, eyes and mouth. In the event of contact, rinse the affected part for several minutes in running water. Clean the product with absorbent paper or a dry cloth and contact your reseller for replacement batteries.



"WEEE" Weight:xxxxx